

FFD10012DCR FIT OFF GUIDE

ECD

ECD

ECD

ECD


ECD

ECD

FIND THE POSITION OF THE DUCT BODY AND FIX INTO POSITION USING CONCRETE SCREWS/ANCHORS OR GLUE

CUT REQUIRED PENETRATIONS IN WALL AND BRING CABLES THROUGH. TAKE CARE TO NOT MAKE PENETRATIONS HIGHER THAN THE DUCT OR USE OPTIONAL WALL TRANSITION FITTING)

- INSTALL UMBILICAL BOX BODY TO FLOOR DUCT WITH SCREWS PROVIDED. SCREWS LINE UP WITH THREAD FORM SLOT IN DUCT BODY.
- FIX UMBILICAL BOX & COVER INTO POSITION. NOTE: BOX CAN BE FIXED DIRECT TO THE DUCT (AS SHOWN) OR WITH CARPET BETWEEN.
- FIX UMF UMBILICAL TO BOX COVER.

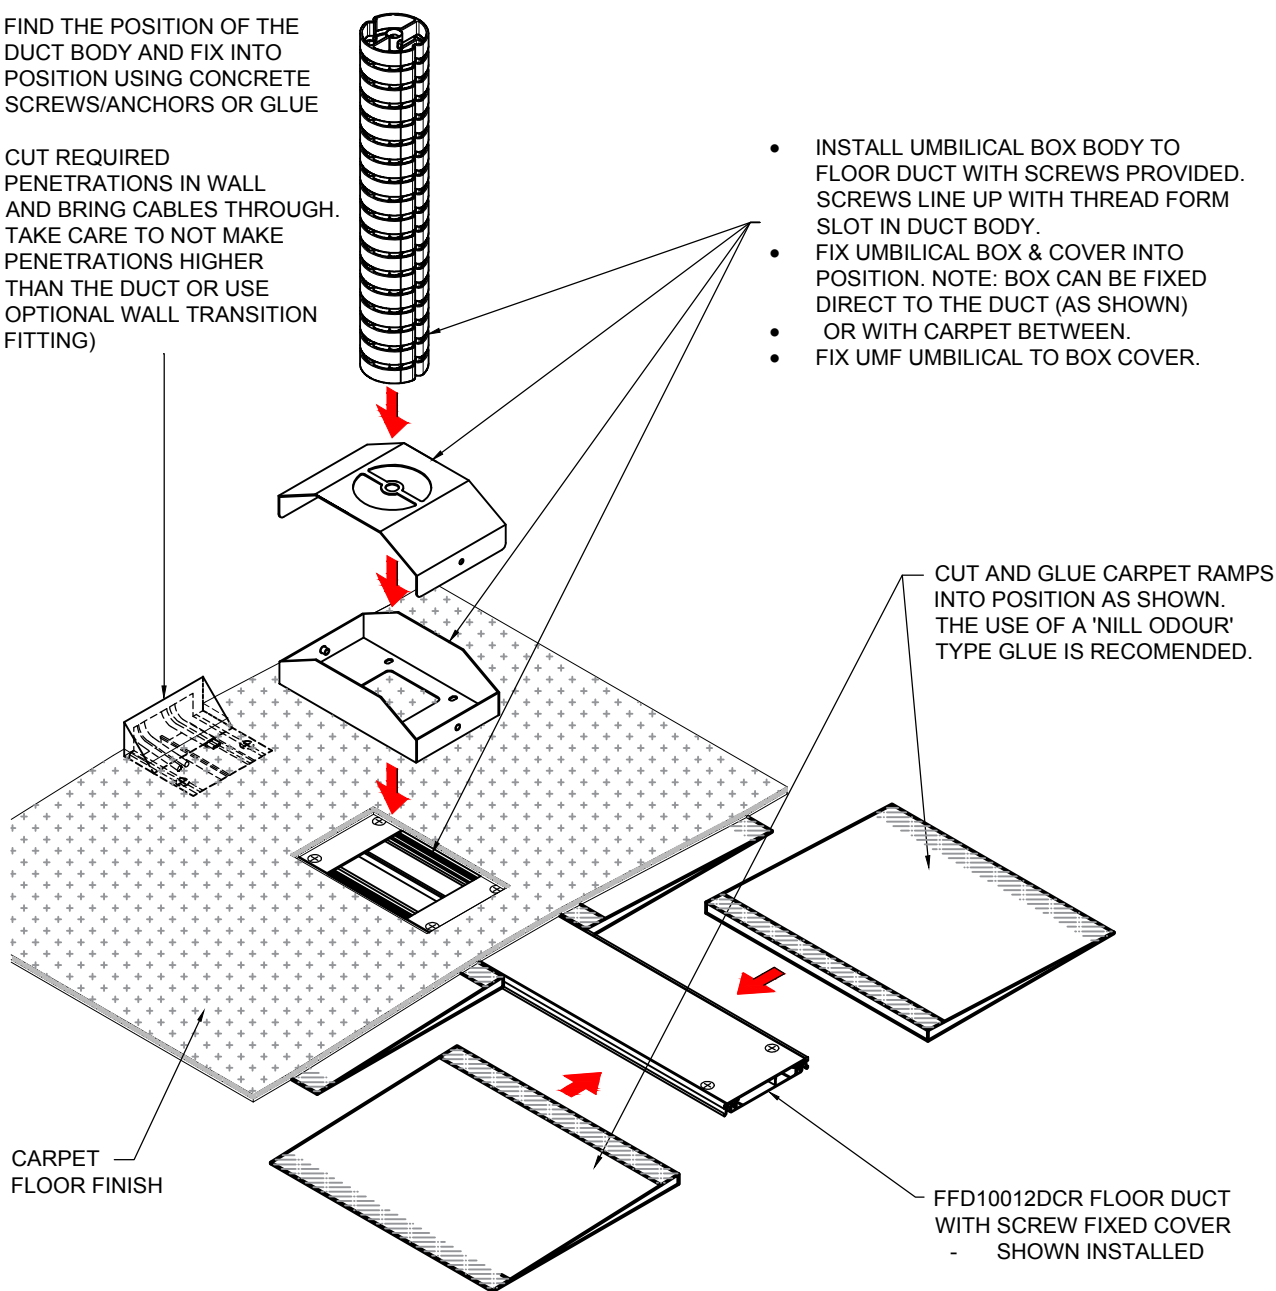

ESTABLISHED 1979

Electric Cable Duct Systems Pty. Ltd.


Ph: 1300 123 ECD (323) Fax: (03) 9899 5042

Email: info@ecd.net.au


www.ecd.net.au

ABN 80005544105

FFD10012DCR FIT OFF GUIDE

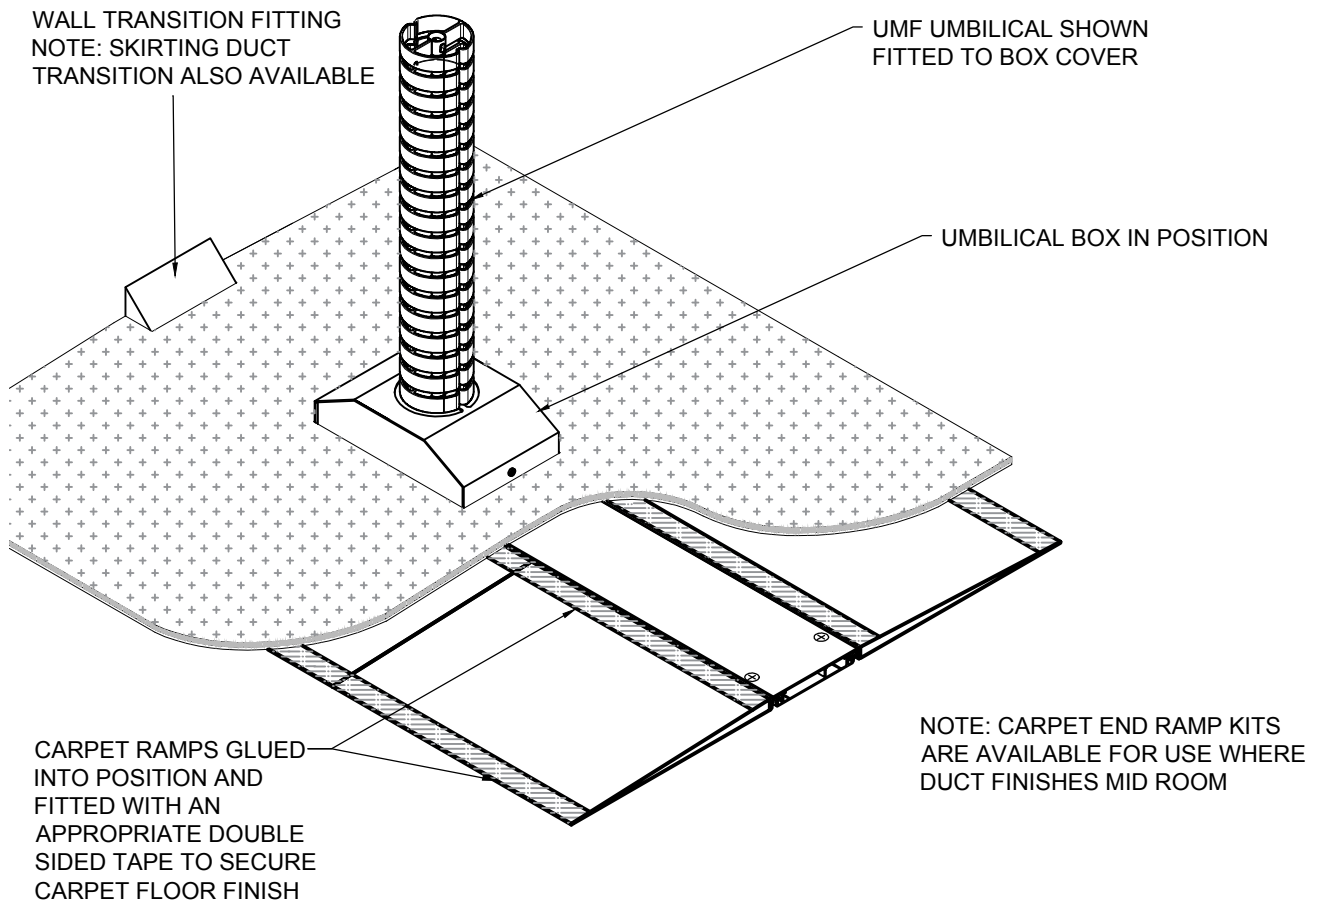

SECTION VIEW - DUCT AND CARPET RAMPS

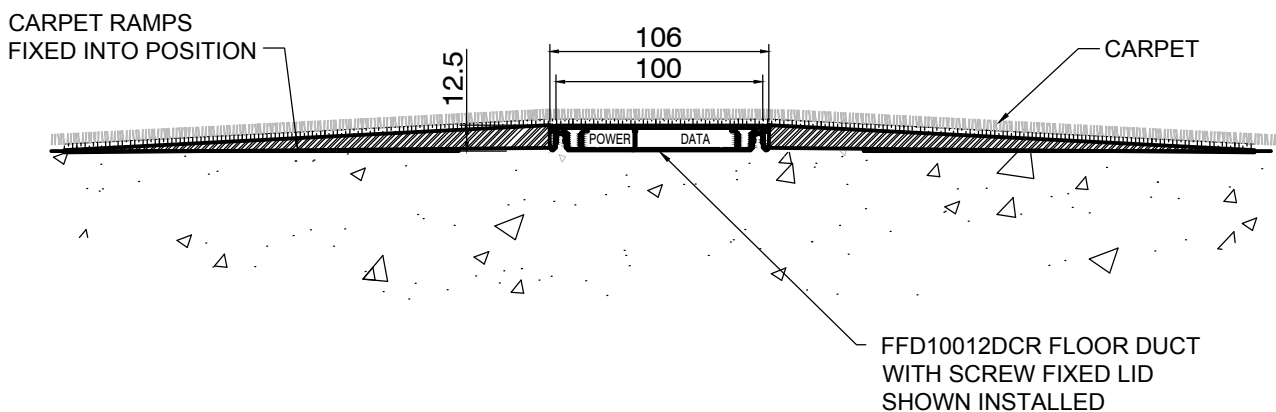

Electric Cable Duct Systems Pty. Ltd.

Ph: 1300 123 ECD (323) Fax: (03) 9899 5042

Email: info@ecd.net.au

www.ecd.net.au

ABN 80005544105